


POWERTEC

WORKBENCH

WB-MS-S2

Manual

www.samfitness.com.au

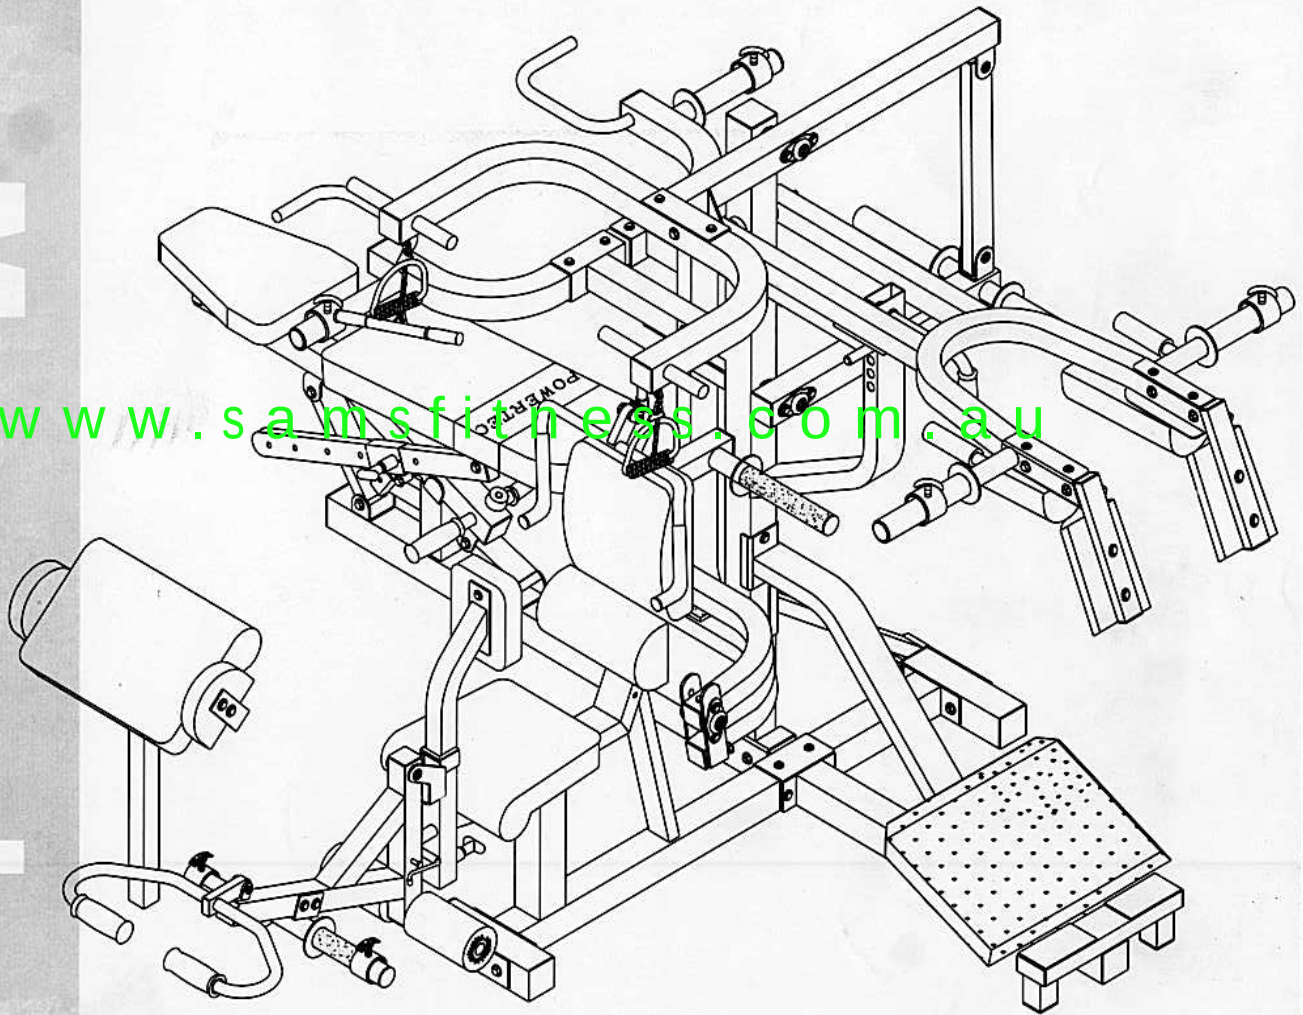

LEVERAGE MULTI SYSTEM

www.samsfitness.com.au

HARDWARE LIST



11 1/2"x4-1/8"(qty:4)



35 $\emptyset$ 10x25x2.0t(qty:32)



54 3/8"x7"(qty:2)



55 3/8"x1-1/2"(qty:14)



56 3/8"x3/4"(qty:10)



58 1/2"x3-1/2"(qty:7)



59 1/2"x4-1/4"(qty:14)



60 1/2"x3"(qty:7)



61 $\emptyset$ 14x28x2.0t(qty:78)



67 3/8"x11t(qty:2)



96 1/2"x2-3/4"t(qty:4)



97 1/2"x16t(qty:41)



98 3/8"x2-3/4"(qty:4)



118 $\emptyset$ 10x35x3.0t(qty:4)



119 1/2"x2-1/2"(qty:1)



125 3/8"x1-3/4"(qty:2)



137 3/8"x1"(qty:5)

www.samsfitness.com.au

WB-MS S2

LEVERAGE MULTI SYSTEM

PART LIST

Composed of 3 stations : CP ----- Chest Press Station; SQ ----- Squat Station; LP ----- Lat Pull Station.

Part	Description	QTY	Part	Description	QTY
1	Base (SQ)	1	36	1/2"X1/2"Hex. Bolt	4
2	Bench mainframe (CP)	1	37	Chest support tube (LP)	1
3	Backrest adjustment bracket (CP)	1	38	PVC sleeve	7
4	Backrest adj. tube (CP)	1	39	Square open end cap	1
5	Backrest support (CP)	1	40	Round open end cap	2
6	Linkage tube A (CP)	1	41	Rect. inner plug	1
7	Linkage tube B (CP)	1	42	Square inner plug	11
8	Bench base (CP)	1	43	Rect. inner plug	5
9	Backrest support (LP)	1	44	Handle grip	2
10	Main upright	1	45	1/2"X6"Half-thread hex. Bolt	1
11	1/2"X4-1/8"Half-thread hex bolt	4	46	Round inner Plug	9
12	"U" shape arm (CP)	1	47	Bumper	1
13	Pocket screw	24	48	Square inner plug	6
14	Hand grip	2	49	Square inner plug	12
15	Row accessory bar (LP)	1	50	Square inner plug	1
16	Collar	6	51	Rect. inner plug	4
17	Leg developer (LP)	1	52	Knob Bolt	1
18	Roller tube (LP)	1	53	1/2"X6-1/4"Half-thread hex. bolt	1
19	Arm curl tube (LP)	1	54	3/8"X7"Half-thread hex. bolt	2
20	Weight horn	2	55	3/8"X1-1/2"Hex. Bolt	14
21	Chain	1	56	3/8"X3/4"Hex. Bolt	24
22	Base (LP)	1	57	Steel axis	1
23	Steel axis	1	58	1/2"X3-1/2"Half-thread hex. bolt	7
24	Tilted support (SQ)	1	59	1/2"X4-1/4"Half-thread hex. Bolt	14
25	"U" shape arm (LP)	1	60	1/2"X3"Half-thread hex. bolt	12
26	Round inner plug	2	61	Washer	100
27	Connected bar (LP)	1	62	Ball head lock pin	2
28	Olympic weight horn (LP)	1	63	Ball head lock pin	1
29	"U" sharp arm (SQ)	1	64	Lower lat bar	1
30	Foot plate (SQ)	1	65	Rect. Inner plug	4
31	Arm curl pad support tube (LP)	1	66	Steel axis	1
32	Shoulder pad tube (SQ)	2	67	Nylon nut	3
33	Rivet	2	68	Nylon nut	4
34	Bench lift up bar (CP)	1	69	Bearing	10
35	Washer	48	70	PVC sleeve	2

WB-MS-S2

LEVERAGE MULTI SYSTEM

PART LIST


Composed of 3 stations : CP ----- Chest Press Station; SQ ----- Squat Station; LP ----- Lat Pull Station.

Part	Description	QTY	Part	Description	QTY
71	Metal bushing	22	104	Bumper (Row Chair)	2
72	Roller foam	2	105	Safety round steel	1
73	Large shoulder pad (SQ)	2	106	Round bumper (LP)	1
74	Small shoulder pad (SQ)	2	107	Weight horn (LP)	1
75	Chest pad (LP)	1	108	PVC Sleeve	2
76	Upper back pad (LP)	1	109	Rubber bumper (SQ)	1
77	Backrest pad (CP)	1	110	Ring head lock pin	1
78	Seat pad (LP)	1	111	Square inner plug	1
79	Lower back pad (LP)	1	112	Rect. open end cap	1
80	Arm Curl pad (LP)	1	113	Rubber sleeve	2
81	Seat pad (CP)	1	114	Square inner plug	6
82	Side pad of arm curl section (LP)	2	115	Bumper (CP)	1
83	1/2"X4"Half-thread hex. bolt	4	116	Big Washer	4
84	Rapid lock pin	2	117	Bearing shroud	6
85	End cap (LP)	1	118	Washer	4
86	Name plate	1	119	1/2"X2-1/2"Half-thread hex. bolt	1
87	Seat adj. bracket (LP)	1	120	3/8"X1-3/8"Hex.Bolt	1
88	Washer	2	121	Bail head lock pin	1
89	Hand grip	5	122	Big washer	2
90	Lock hook	1	123	Ellipse hook	5
91	Rear tilted support	1	124	AB strap	1
92	Row chair lower tube (LP)	1	125	3/8"X1-3/4"Hex.Bolt	2
93	Row chair upper tube (LP)	1	126	PVC sleeve	6
94	Arm curl handle (LP)	1	127	Foam roller covers	2
95	Seat support tube (LP)	2	128	Rubber sleeve	6
96	1/2"X2-3/4"Half-thread hex. bolt	4	129	Rubber sleeve	2
97	Nylon nut	52	130	Barbell tube	1
98	3/8"X2-3/4"Hex bolt	4	131	Connected tube	2
99	Hand grip	2	132	Rear base tube	1
100	Metal bushing	2	133	Front base tube	1
101	Selection round steel (CP)	2	134	Linkage tube	1
102	Bumper (Row Chair)	1	135	Steel axis	1
103	Bumper (CP)	4	136	Metal bushing	2
			137	3/8"X1"Hex. Bolt	5

WB-MS-32

LEVERAGE MULTI SYSTEM

EXPLODED DIAGRAM

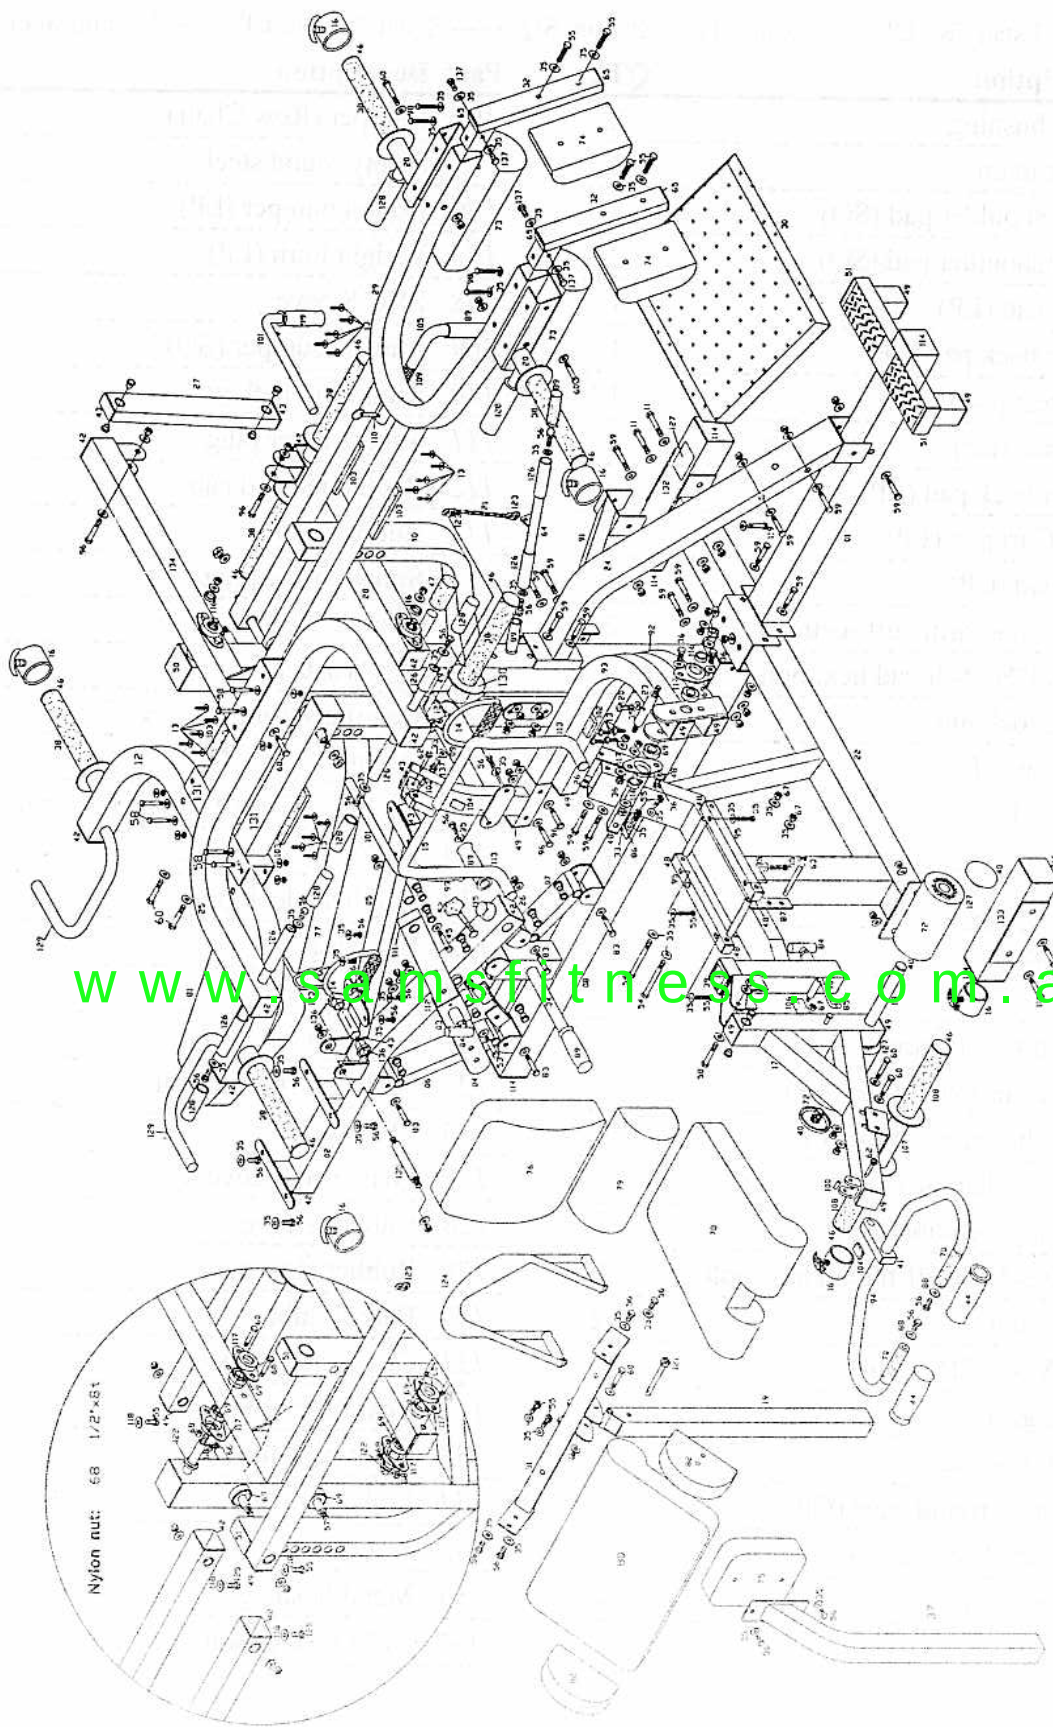

www.samfitness.com.au


Remark: All unmarked Washers are (61), all unmarked Nylon Nuts are (97) and all unmarked Metal Bushings are (7)

322 MULTI SYSTEM

ASSEMBLY ONE

Note before beginning assembly:

***Always insert all bolts through holes prior to tightening
due to precision fit***

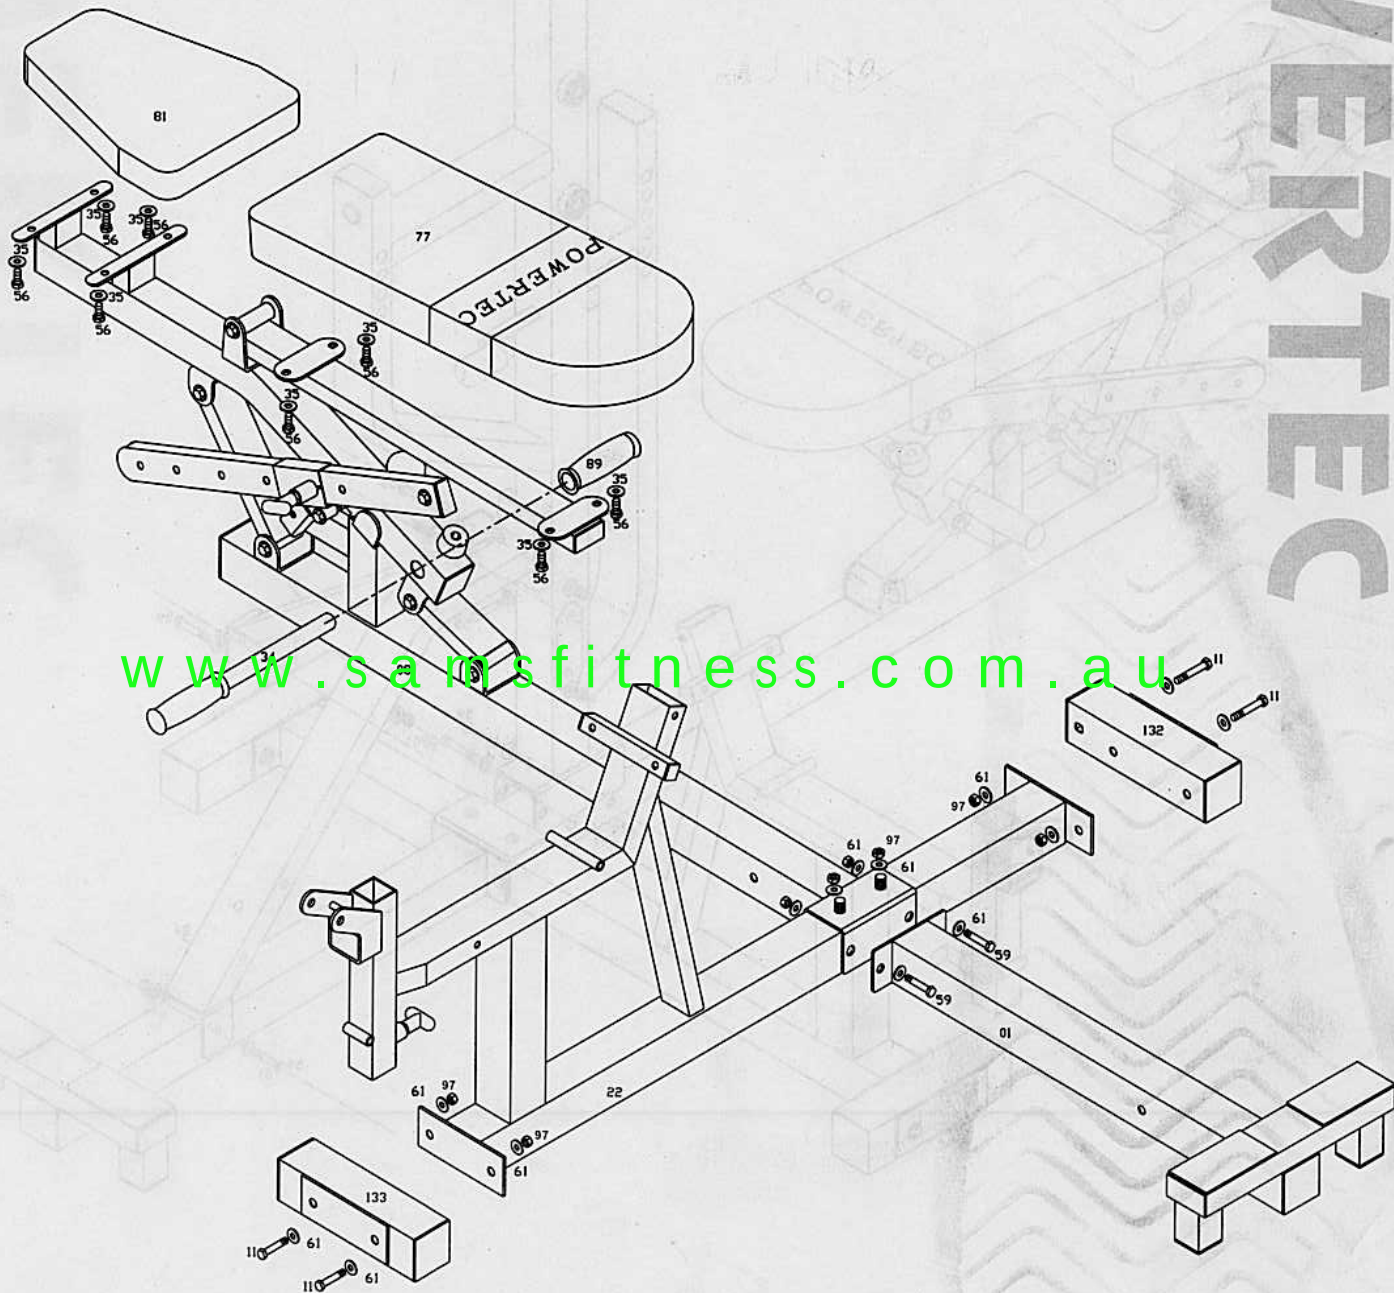


WB-MS-S2

LEVERAGE MULTI SYSTEM

ASSEMBLY TWO

POWERTEC

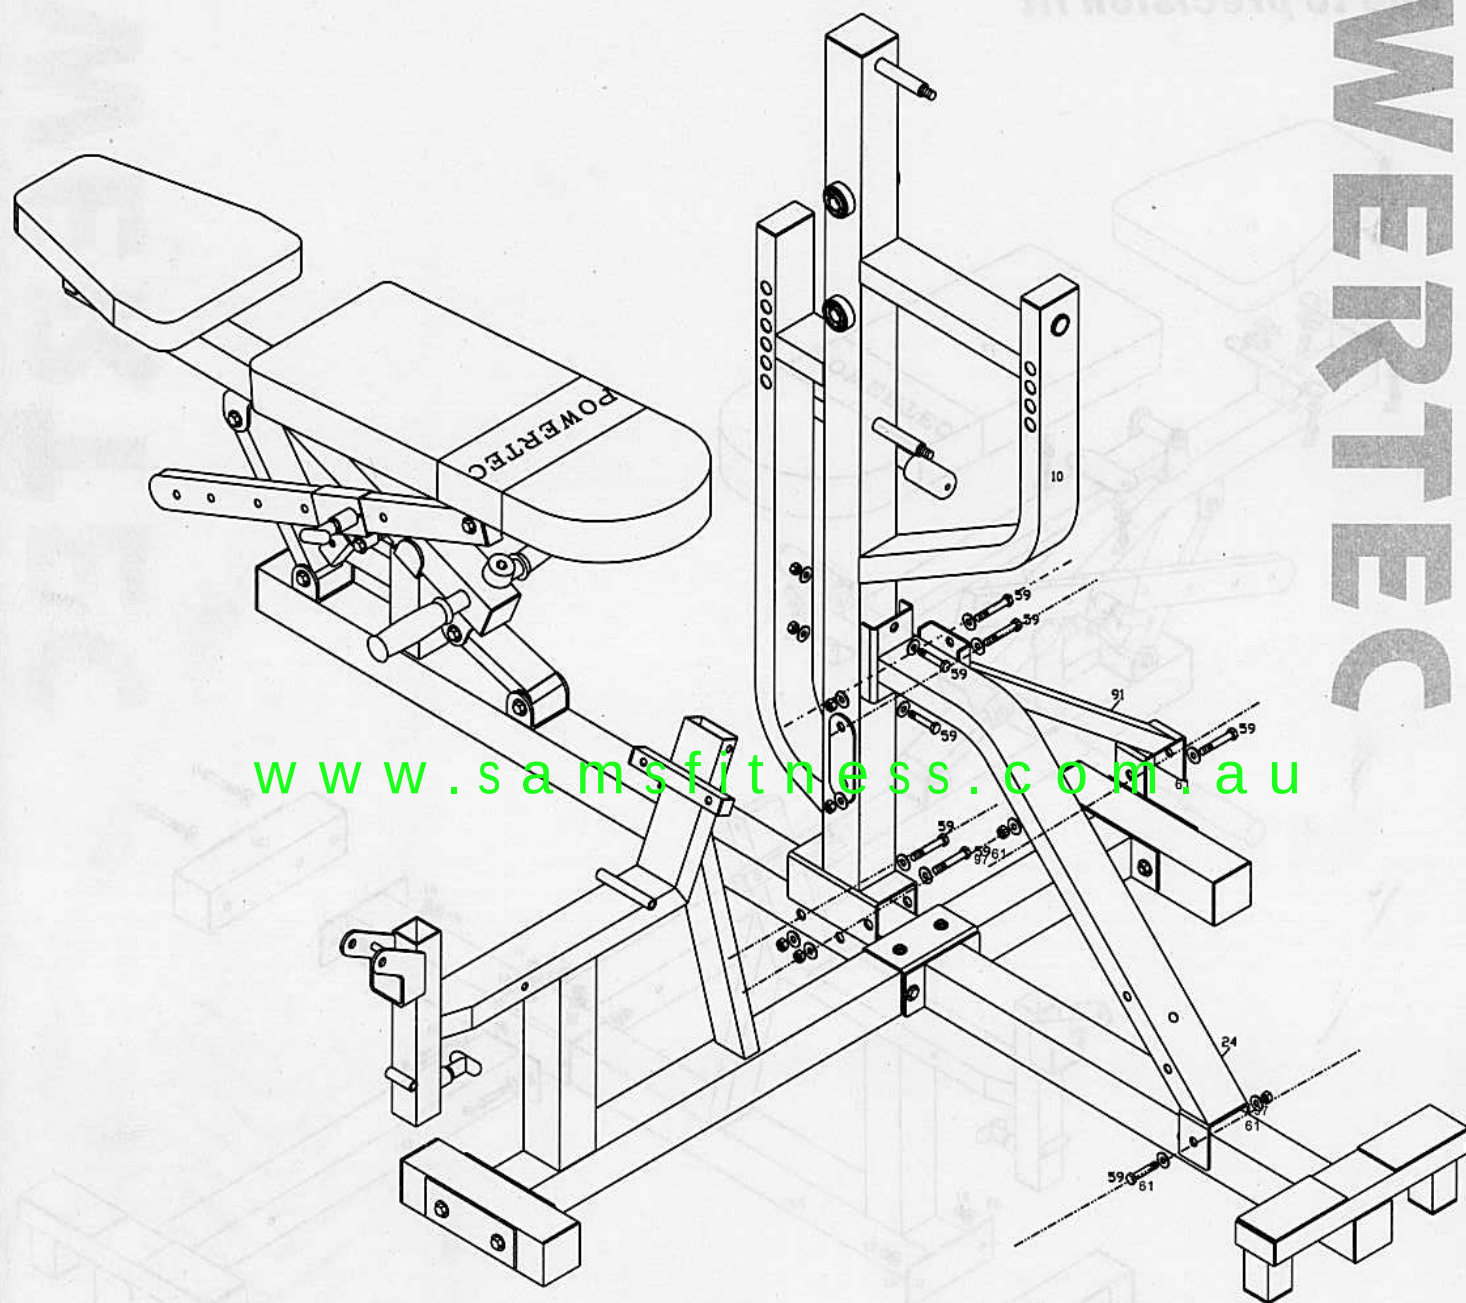


WB-MS-S2

LEVERAGE MULTISYSTEM

ASSEMBLY THREE

POWERTEC

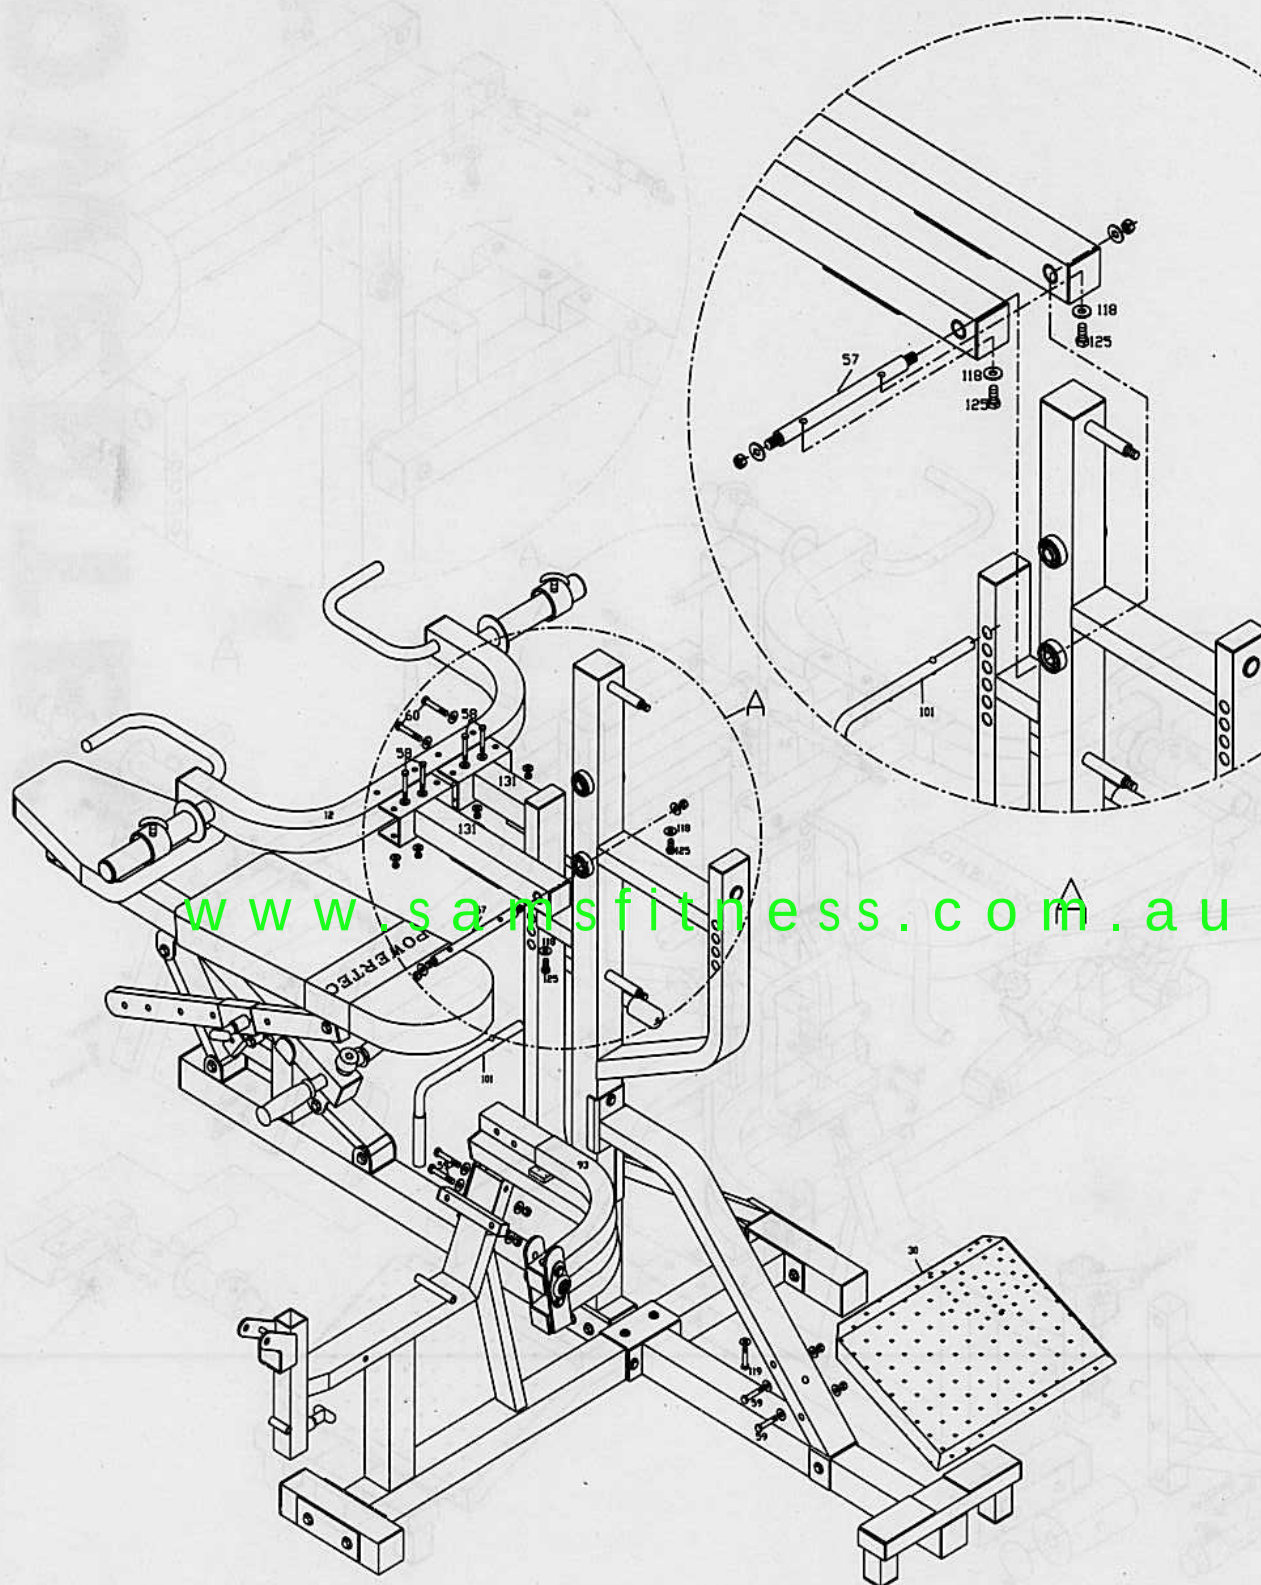

www.samfitness.com.au


WB-MS-S2

LEVERAGE MULTISYSTEM



LEVERAGE MULTI SYSTEM


ASSEMBLY FIVE

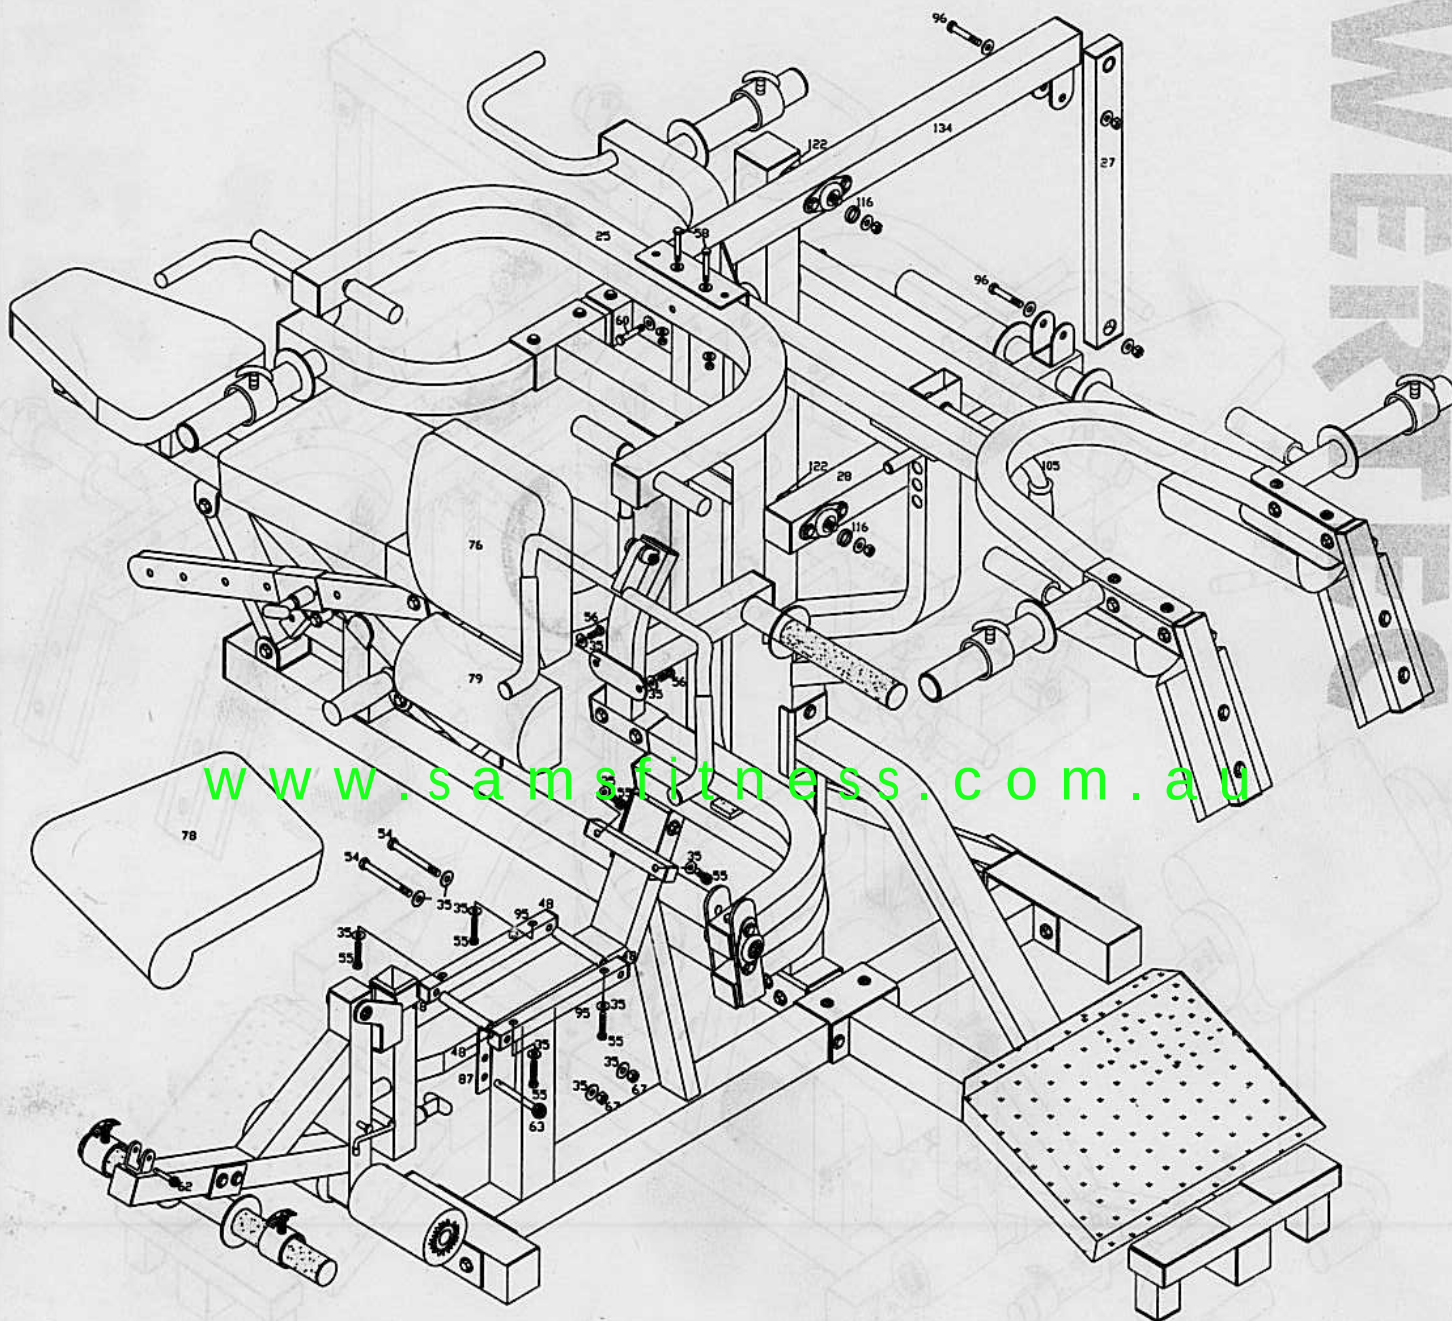

WB-MS-S2

LEVERAGE MULTI SYSTEM

ASSEMBLY SIX

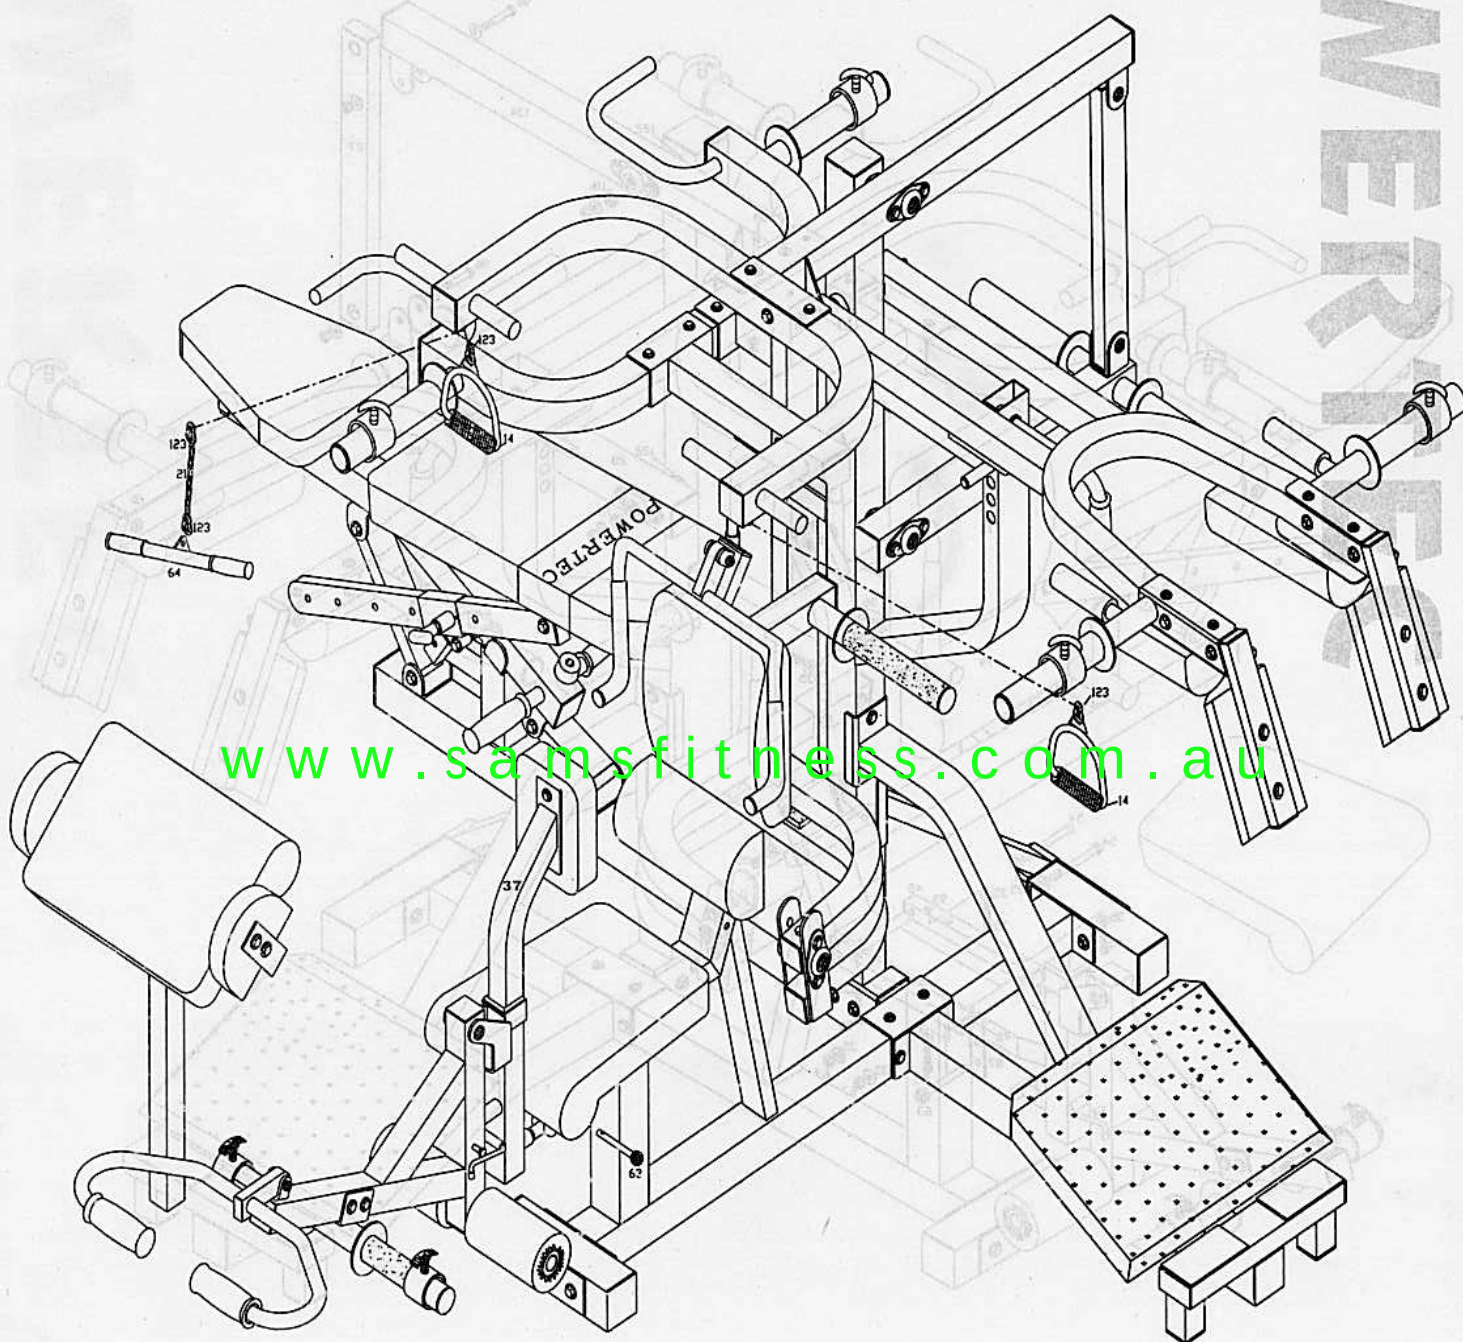


WB-MS-S2

LEVERAGE MULTI SYSTEM

ASSEMBLY SEVEN


POWERTEC

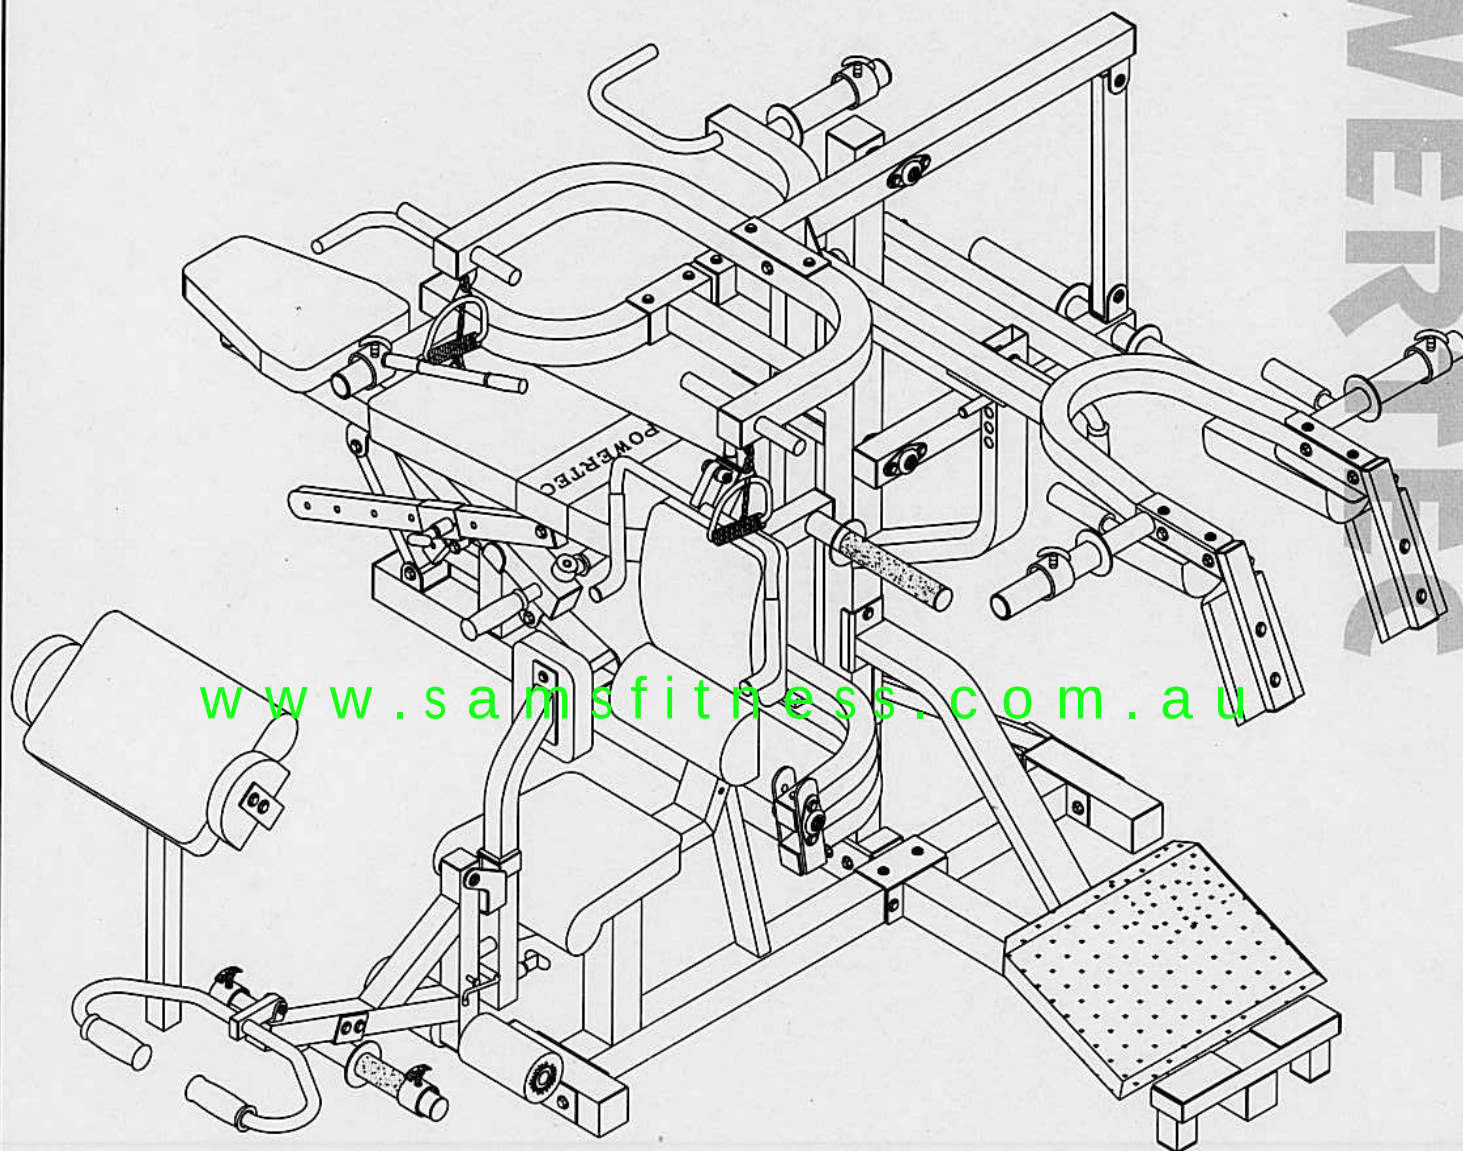

WB-MS-S2

LEVERAGE MULTISYSTEM

ASSEMBLY SEVEN

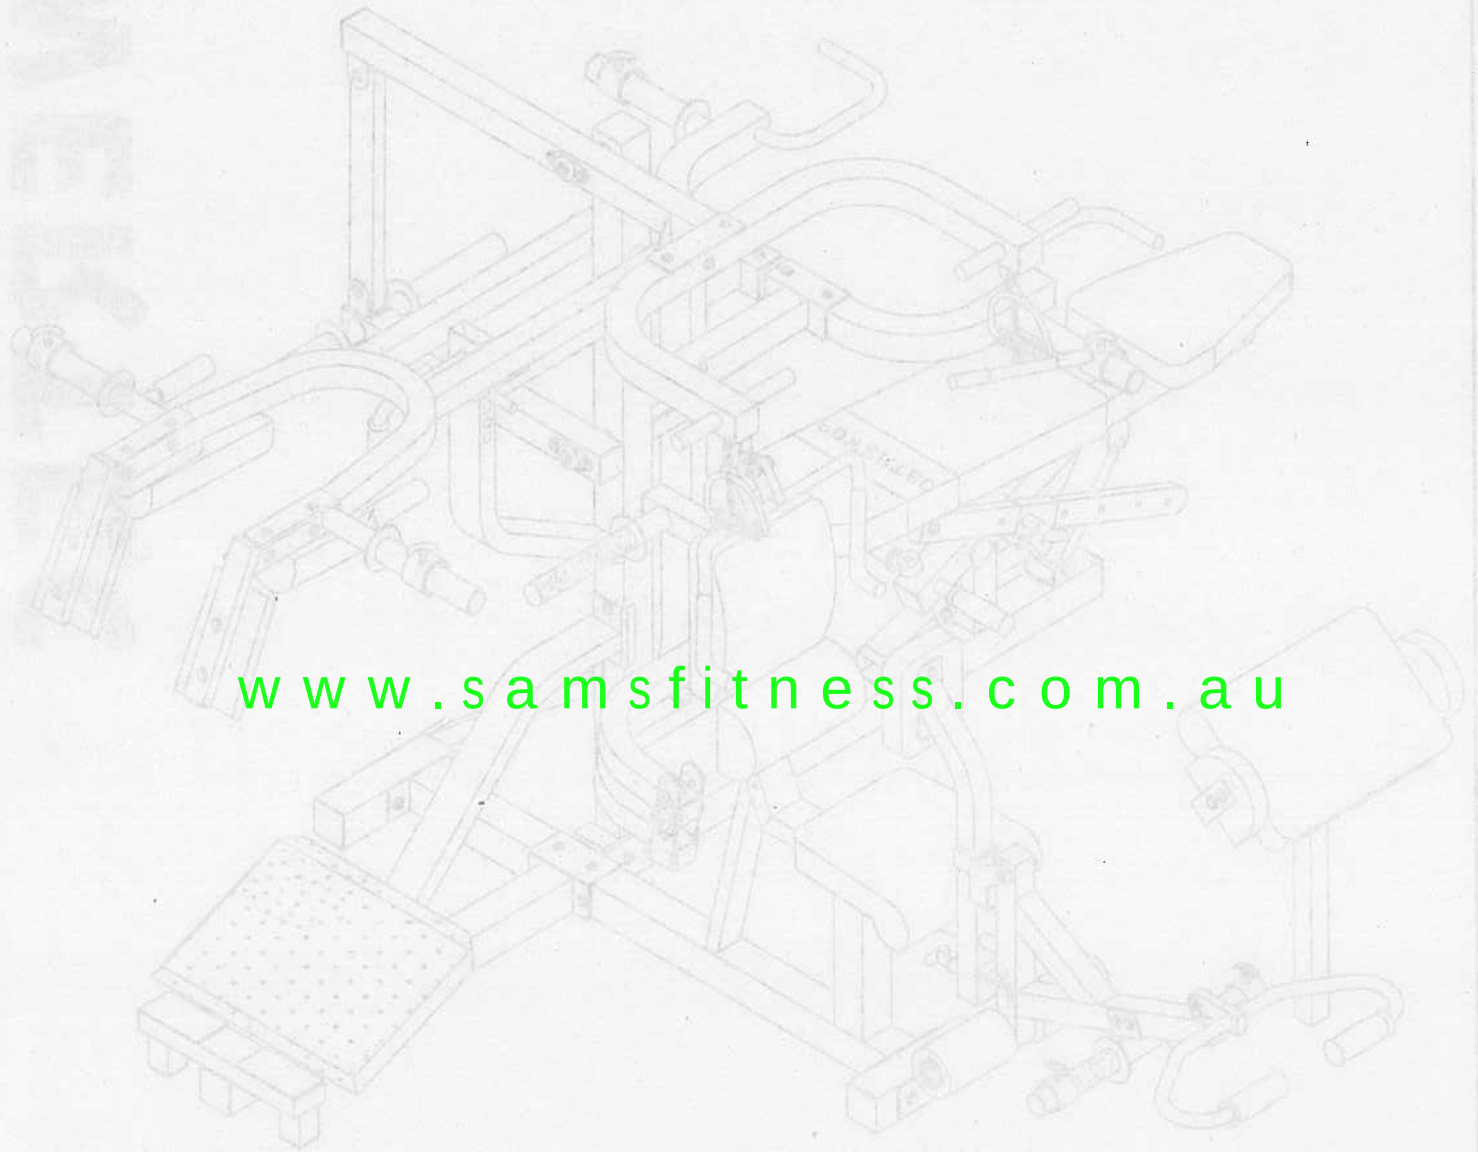

www.samsfitness.com.au

WB-M2-25
LEVERAGE MULTISTATION

POWER

POWER

POWER

POWER

POWER

www.samsfitness.com.au

POWER

POWERTEC IS NOT LIABLE IF THE TRAINER SHOULD INJURE THEMSELVES WHILE USING **POWERTEC** EQUIPMENT OR WHILE PERFORMING THE TRAINING ROUTINE

POWERTEC

WORKBENCH

POWERTEC, INC.

601 W. Harford St. Milford.

PA 18337

Phone: (570) 296-5005

Fax: (570) 296-5009

www.powertecfitness.com

www.samsfitness.com.au

LIFETIME WARRANTY